

Saramonic

HiFi Wireless Microphone System

高保真无线麦克风系统

Blink M2

User Manual

用户手册

Statement

Please read this manual carefully before using and strictly operate and store it in accordance with the instructions. Please save the manual for your future reference. If you need further assistance than the user manual, please consult your retailer for help or email us: info@saramonic.com

- Non-professional teardown is strictly prohibited.
- Please keep it away from heat sources such as heaters or ovens.
- Do not remove the battery without professionals' help.
- Please clean the device with only a soft, dry cloth.
- When using and storing, please keep away from the dust and moisture.
- For the best pick-up pattern, do not hold your hand against the microphone capsule cover.

General Introduction


The Saramonic Blink M2 is a portable 2.4GHz wireless microphone. It features a selectable noise cancellation, which is available for improving the recording effect in a noisy environment. It also boasts a remarkable on-board recording which is available for storing your recording files in real time. The Blink M2 is ideal for live streaming, vlogging, mobile journalism and more.

Use the Blink M2 in many ways. You can choose to use the transmitter with the included 3.5mm lavalier microphone or its built-in microphone as your needs. A 3.5mm TRS/ TRRS auto-sensing output and a USB-C digital output allow the Blink M2 use with cameras, recorders, mixers, smartphones, tablets, laptops and more.

- Up to 250 meters of wireless transmission without obstacles
- Receiver's 3.5mm headphone output - monitor your audio in real-time
- Selectable Mono/ Stereo/ Safety Track output setting
- High-resolution TFT-LCD display - see vital information at a glance
- 8GB memory - store up to 15 hours of recording files
- Transmitter's USB-C port - connect to a laptop or smartphone to read recording files
- Up to 15 hours of operating time for a transmitter (about 7.5 hours when the on-board recording is enabled)
- Charging case included - make the kit easy to carry on

Product Structure

Transmitter (Blink M2 TX)

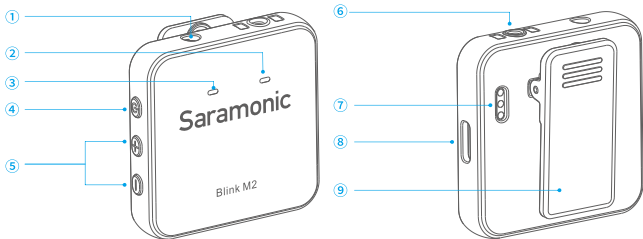

- ① **3.5mm TRS Input**
For connecting the included lavalier microphone or other 3.5mm microphones.

② **Recording Indicator**

Status	Indicator
Microphone muted	Blinking red
On-board recording enabled	Static red

③ **Status Indicator**

Status	Indicator
Unpaired	Blinking blue slowly
Pairing	Blinking blue quickly
Paired successfully	Static blue
Maximum/ Minimum gain	Blinking blue 3 times
Noise cancellation enabled	Static green
Low battery	Blinking red quickly
Charging	Static red
Fully charged	Red light off

⚡ Please charge the transmitter when TX indicates low battery status, or it will automatically shut off within 10 minutes.

④ Power Button

- Press and hold for 2 seconds to power on or off.
- Press to mute or unmute the microphone.
- Press and hold for 5 seconds to enter the pairing state in shutdown mode.

⑤ +/- Button

- Press the "+" or "-" button to adjust mic gain from 0 to 6 level. (The setting is retained even after the power is turned off.)
- Press both the "+" and "-" buttons at the same time to enable or disable the noise cancellation. (The setting is retained even after the power is turned off.)
- Press and hold the "-" button for 3 seconds to enable or disable the on-board recording.

⑥ Built-in Microphone Capsule


⑦ Charging Contacts

⑧ USB-C Data Port

Used for charging. After connecting a laptop or smartphone, can also be used to read the recording files.

⑨ Belt Clip

Receiver (Blink M2 RX)

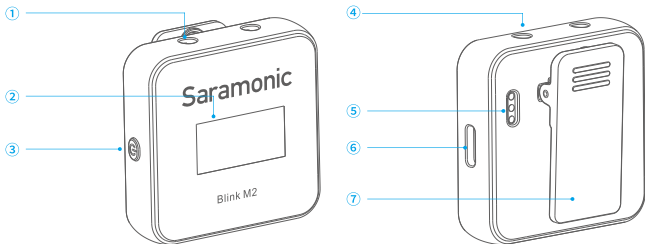

① 3.5mm TRS Headphone Port

Connect your headphone to monitor the audio output in real-time.


② TFT-LCD Screen

③ Power Button

Press and hold for 2 seconds to power on or off. Also can be used for setting values or functions.

- ④ 3.5mm Auto-sensing Output (TRS/TRRS)
For analog audio output to a camera, mixer or smartphone, etc.
- ⑤ Charging Contacts
- ⑥ USB-C Charging Port
- ⑦ Belt Clip


Charging Case (Blink M2 CC)

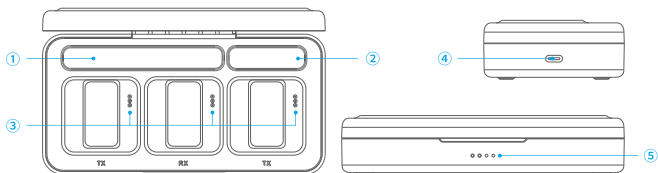

- ① Slot for Included Cables
- ② Slot for Fur Windshield
- ③ Charging Contacts
- ④ USB-C Charging Port
- ⑤ Charging Indicator

Status	Indicator
Low battery	● ○ ○ ○
Charging	● ● ● ●
Fully charged	● ● ● ●
Current battery level (75%)	● ● ● ○

USB-C Receiver (Blink M2 RXUC)

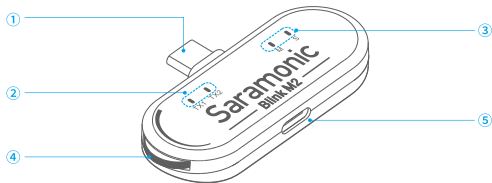

① USB-C Connector

It can be connected to an Android Smartphone, Tablet, Computer and other USB-C devices.

② LED Indicator

Indicates the status of the transmitter TX1 or TX2.

Indicator	Status
Blinking blue	Unpaired
Static blue	Paired Successfully
Static red	Mute
Blinking blue twice	Maximum/Minimum Volume
Blinking red quickly	Low battery

③ Output Mode Indicator

When in mono mode, the "M" indicator lights blue. When in stereo mode, the "S" indicator lights blue. When in safety channel mode, the M and S indicator light blue.


④ Scroll Wheel

- Scroll up or down to adjust the output volume from 1 to 6 level.
- Press to mute or unmute the receiver.
- Press three times to enter the pairing status.

- Press to toggle the output mode between Mono and Stereo.
- Press and hold for 3 seconds to enable or disable your phone's speaker.

⑤ USB-C Charging Port

When the Blink M2 RXUC is plugged into an external device, the external device can be powered via this charging port. When connected to the included audio cable, this port can be used to monitor recordings while powering your device.

 1. Most USB-C devices can be powered and charged through this port while in use. This USB-C port supplies 5V/2A rated input and output.










2. Plug your USB-C headphones into the port directly for monitoring is not supported.

3. If a charging cable was plugged in during recording, the audio would be interrupted.

Receiver's Screen Operations

Home screen overview



	Indicates that the receiver is in Mono, Stereo, or Safety Track mode.
	Indicates the receiver's output volume from 0 to 6. Default to 5.
	Indicates that channel A/ B is connected.
	Indicates current audio input level. (Reduce the transmitter gain accordingly when the volume bar shows orange or red.)
	Microphone is muted.
	Upper right corner: Indicates the receiver's battery level. Bottom: Indicates corresponding transmitter's battery level.
	Indicates the wireless signal strength between transmitter and receiver.
	Indicates that channel A is connected, and the on-board recording of the corresponding transmitter has been enabled.
	Indicates that channel B is connected

Menu introduction

- From the Home screen, press the power button to access the menu page. Continue to press the power button to switch the different settings until the receiver returns to the Home screen.
- From the menu page, press and hold the power button to access options→press to setting values or functions→press and hold again to save the settings.
- If no operation is performed within 20 seconds on the menu page, the display will automatically return to the Home screen.

Main Menu	Sub Menu	Description
Output Volume	0~6	The output gain level of the receiver can be reduced if the sound is distorted. The setting is retained even after the power is turned off. (Default to 5)
Output Mode	Mono	Signal from the transmitter or both transmitters can be mixed together and recorded identically to the left and right tracks.
	Stereo	Signals from each transmitter can be recorded to a separate track.
	Safety Track	Similar to Mono mode, the audio of the right track will be recorded in -12dB in case of distortion in your recordings.
TX Mute Key	Enable	The "mute" function is activated.
	Disable	The "mute" function is deactivated to prevent inadvertent operation.
Auto Record	Enable	When this mode is activated, the transmitter will start recording audio as soon as it is switched on.
	Disable	The on-board recording is disabled by default when the transmitter is switched on.
Backlight	On	The backlight always stays on. (Default setting)
	10s	The backlight will turn off if no operation occurs for 10 seconds.
	30s	The backlight will turn off if no operation occurs for 30 seconds.
	60s	The backlight will turn off if no operation occurs for 60 seconds.

Set TX Time	Enter	<ul style="list-style-type: none"> • Set the date and time so that all recording files will include a time-stamp when exported. • After the transmitter and receiver are paired, the system time of the transmitter(s) can be set. (Note: If the time was set when only one transmitter is paired, the time of the two transmitters might be out of sync.)
Language	简体中文	Default to English.
	English	
Reset Default	Yes?	After selecting Yes, the receiver's relevant parameters will be restored to the default factory values. (Please use it with caution.)
	No?	
Pair	Yes?	After selecting Yes, the receiver will enter the pairing state.
	No?	
Version		Indicates the receiver's software version.

How to Use

Transmitter


1. When using the built-in microphone outdoors or in a windy environment, please attach the fur windshield to the transmitter(s). When using the included wired lavalier microphone, please connect it to the transmitter's 3.5mm TRS input jack.
2. In order to improve the recording effect in a noisy environment, it is recommended that press the "+" and "-" buttons on the transmitter(s) at the same time to enable noise cancellation.



Using Blink M2 RX Receiver

1. Connect a camera, a smartphone or a laptop to the 3.5mm auto-sensing audio output of the receiver with an adapter cable.


💡 If the camera you used was SONY ZV-1, ZV-1 II, ILCE-7C, or FUJIFILM X-S10, please mount the included cold shoe adapter on your camera first.

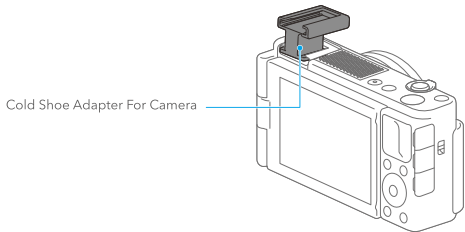

2. Press and hold the power buttons for 2 seconds to turn on the transmitter(s) and receiver.

3. The transmitter(s) and receiver are paired by default. If they are disconnected, please follow the below steps:


- ① Press and hold the transmitter's power button for 5 seconds in shutdown mode to make it enter the pairing state. Its status indicator blinks blue rapidly.
- ② Access the receiver's menu, and then find the Pair page. After selecting Yes, the receiver will enter pairing state.

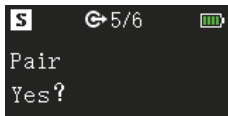

- ③ Transmitter(s) and receiver will be successfully paired within 10s. The transmitter's status indicator will turn static blue.
4. Plug your headphones into the receiver's 3.5mm headphone port for audio monitoring as your need.
5. Set Mono/ Stereo/ Safety Track mode on the receiver's menu as your need.
6. It is recommended to record a sample and play it back to check if the audio level is acceptable before recording.


Using Blink M2 RXUC Receiver

1. The Blink M2 RXUC receiver plugs right in and mounts to the USB-C port of your smartphone, tablet, computer, or other class-compliant mobile devices with USB-C.
2. Please follow the steps below to pair.
 - ① Press and hold the transmitter's power button for 5 seconds in shutdown mode to make it enter the pairing state. Its status indicator blinks blue rapidly.
 - ② Press the receiver's scroll wheel three times constantly to make it enter the pairing state. Its TX1 (TX2) LED indicator blinks blue rapidly.
 - ③ Transmitter(s) and receiver will be successfully paired within 10 seconds. Both of their status indicators will turn static blue.
3. To monitor your sound input, connect your headphones to the receiver using the included TRS & USB-C cable.
4. Set the audio output mode of the receiver as Mono or Stereo by pressing its scroll wheel once as you need.
5. It is recommended to record a sample and play it back to check if the audio level is acceptable before recording.

-  1. Each transmitter can only be paired with one of the receivers.
- 2. When both transmitters need to be paired with receiver, operate the transmitter first, and then operate the receiver.
- 3. Due to the 2.4GHz wireless frequency is widely used, the signal may be easily attenuated or interfered. Please try to avoid obstacles while using, such as walls and buildings. And keep away from the devices with 2.4GHz frequency, such as high-power Wi-Fi antennas, radios, etc.
- 4. After recording, put the transmitter(s) back into the case for charging.

Speaker

Once the Blink M2 RXUC receiver is plugged into your smartphone, your phone's speaker is enabled by default, that is, the audio from your phone can be played directly without unplugging the receiver. The phone's speaker can be disabled in the Saramonic APP.

-  1. When your phone's speaker is enabled or disabled via the Saramonic APP, the receiver is disconnected from the transmitter.
- 2. When your phone's speaker has been enabled, the audio cannot be monitored through an included audio cable. It is recommended to disable your phone's speaker before monitoring.
- 3. When your phone's speaker has been enabled, a howling noise may occur in a phone call, or accentuation and compatibility issues may occur when using third-party applications. Please disable your phone's speaker if needed.

On-Board Recording

- Press and hold the transmitter's "-" button for 3 seconds to enable the on-board recording. Or activate the "Auto Record" mode so that the transmitter can start recording audio as soon as it is switched on.
 - The memory can store up to 15 hours of recording at the 48kHz/24bit sampling rate.
 - The file will be automatically split after 30 minutes of recording, making it easy to quickly find your desired recording segment.
 - By default, the recording files are named in the format "DATE-TIME.WAV". Up to 999 recording files can be created.
 - If the memory is full, the original file will be automatically overwritten with the latest file from the beginning.
- 💡 1. Note that in this mode, the "mute" function will not affect the on-board recording.
2. Please calibrate the timestamps based on the current date and time when using the transmitters for the first time.

Troubleshooting

If you encounter problems when using the unit, please refer to the following checklist before contacting technical support. If the problem cannot be solved, please contact the dealer's after-sales service department.

- **The units failed to enter the pairing state**
 - ① Make sure the transmitter is turned off, and then press and hold its power button until its status indicator blinks blue quickly.
 - ② The transmitter will enter USB Mode and cannot be paired with the receiver when connected to the laptop to read the recording files.
- **No sound from the units**
 - ① Check if the transmitter and receiver have been paired successfully. If not, please pair them manually first.
 - ② Check if the microphone is muted. Short press the transmitter's power button to unmute it.
 - ③ Check if the gain and volume are turned to a minimum. Adjust them to a suitable level.

- **The recording files failed to be read when the transmitter is connected to a laptop**
Make sure the on-board recording is disabled so that the recording files can be read.
- **Failed to set time of the transmitter(s)**
 - ① Make sure each transmitter and receiver are paired. Ensure that their onboard recording is disabled.
 - ② Make sure that date and time formats are set correctly.
- **The operating range of the unit is limited and the distorted noise appears**
 - ① It is generally caused by interference in your environment. If there is a working high-power wireless router or wireless device in your environment, it is recommended to change the place or find a suitable distance or angle.
 - ② Due to the 2.4GHz wireless frequency being widely used, the signal may be easily attenuated or interfered with. Please try to avoid obstacles while using, such as walls and buildings. And keep away from devices with 2.4GHz frequency, such as high-power Wi-Fi antennas, radios, etc.
 - ③ Make sure the connecting cable between the product and the device is not loose.
- **Failed to monitor audio when using the Blink M2 RXUC receiver**
Make sure the phone's speaker feature is disabled.
- **Howling noise occurs when using the Blink M2 RXUC receiver**
Make sure the phone's speaker feature is disabled.
- **The charging case failed to charge the units**
 - ① Firstly, it is recommended to charge the charging case to rule out the low battery.
 - ② Wipe all the charging contacts of the product with a clean cloth to avoid a loose connection caused by dust.
 - ③ If the magnetic force of the charging case is aging and the products failed to be attracted, please contact our after-sales service for help.

Specifications

Blink M2 TX Transmitter

Transmission Type	2.4GHz digital frequency
Modulation	GFSK
Polar Pattern	Omnidirectional
Antenna	PIFA
Operating Range	Up to 250m (Measured in open environment without obstacles and interference.)
RF Output Power	< 10dBm
Distortion	≤0.1%
Frequency Response	20Hz-20kHz
Reference Audio Input Level	-30~-42dBV (MIC input, 0dB gain)
Sampling Rate	48kHz
Bit Rate	24bit
Signal-to-Noise Ratio	> 90dB
Audio Input	Built-in microphone capsule/ 3.5mm TRS input
Memory	8GB
Maximum Recording Time Stored	Approx. 15 hours
Recording Format	WAV
Battery Capacity	280mAh
Power Requirements	Built-in rechargeable lithium-ion battery
Charging Connector	Charging contacts/ USB-C port (5V/1A)
Operating Time	Approx. 15 hours (Approx. 7.5 hours when the on-board recording is enabled)
Charging Time	Approx. 2 hours
Weight	24g
Dimensions	43.6x43.6x12.5 mm
Operating Temperature	0°C to +50°C
Storage Temperature	-10°C to +50°C

Blink M2 RX Receiver

Transmission Type	2.4GHz digital frequency
Modulation	GFSK
Polar Pattern	Omnidirectional
Antenna	PIFA
Operating Range	Up to 250m (Measured in open environment without obstacles and interference.)
RF Output Power	< 10dBm
Distortion	≤0.1%
Frequency Response	20Hz-20kHz
Reference Audio Input Level	-30~-42dBV (MIC input, 0dB gain)
Sampling Rate	48kHz
Bit Rate	24bit
Signal-to-Noise Ratio	> 90dB
Audio Output	3.5mm auto-sensing output (TRS/TRRS) 3.5mm TRS headphone port
Battery Capacity	300mAh
Power Requirements	Built-in rechargeable lithium-ion battery
Charging Connector	Charging contacts/ USB-C charging port (5V/1A)
Operating Time	Approx. 12 hours
Charging Time	Approx. 2 hours
Weight	27.5g
Dimensions	43.6x43.6x15.8 mm
Operating Temperature	0°C to +50°C
Storage Temperature	-10°C to +50°C

Blink M2 CC Charging Case

Built-in Lithium-ion Battery Voltage/ Capacity	3.7V/ 1800mAh
Charging Time	Approx. 3 hours
Charging Connector	USB-C port
Times for Charging Microphone	1.2 times (2*TX+1*RX)
Weight	180.5g
Dimensions	163×81×33 mm
Operating Temperature	0°C to +50°C
Storage Temperature	-10°C to +50°C

Blink M2 RXUC Receiver

Transmission Type	2.4GHz digital frequency
Modulation	GFSK
Antenna	PIFA
Operating Range	Up to 100m (Measured in open environment without obstacles and interference.)
Frequency Response	20Hz-20kHz
Audio Output	USB-C digital output
Power Requirements	Powered by an external device
Weight	Approx. 11.3g
Dimensions	57.45mm×22.88mm×8mm
Operating Temperature	0°C to +50°C
Storage Temperature	-10°C to +50°C

In the Box

- 2× Blink M2 TX Transmitter
- 1× Blink M2 RX Receiver
- 1× Blink M2 RXUC Receiver
- 1× Blink M2 CC Charging Case
- 1× 3.5mm TRRS to TRRS Audio Output Cable
- 1× USB-C Male to 3.5mm TRS & USB-C Female Audio Cable
- 1× USB-A to USB-C Cable
- 2× Fur Windshield for Built-in Microphone
- 1× Cold Shoe Adapter For Camera
- 2× Lavalier Microphone
- 1× Carrying Case

声明

请在使用前仔细阅读本手册，并严格按照说明进行操作和存储。请妥善保存好说明书以供将来参考。如果用户手册不能帮助您解决某些问题，请向零售商寻求帮助或给我们发送电子邮件：info@saramonic.com

- 请勿擅自拆开机壳；
- 请勿将本机靠近热源，如加热器、烤箱或其他产生热量的设备；
- 电池不可自行更换；
- 请使用柔软的干布清洁本设备；
- 在使用和储存时，请注意防尘和防潮。
- 为获得最佳拾音效果，请勿将手放在麦克风咪头上。

产品概述


枫笛Blink M2是一套便携式2.4GHz无线麦克风，不仅具备可设置的降噪功能，从容应对嘈杂的录音环境，还支持板载录音，可以对录音文件实时存档，适用于直播、Vlog拍摄、移动新闻等应用场景。

使用方式多样，除了本机内置麦克风外，发射器也可搭配3.5mm领夹麦使用。两种接收器对应3.5mm自适应TRS/TRRS模拟输出和USB-C数字输出，可广泛兼容相机、录音笔、混音器、智能手机、平板、电脑等。

- 无障碍情况下，无线传输距离达250米
- 接收器支持接入3.5mm耳机实时监听
- 自由切换单声道/立体声/安全音轨模式
- 高分辨率TFT彩屏，重要信息一目了然
- 内置8GB存储芯片，最高支持存储15小时板载录音文件
- 发射器Type-C接口支持连接电脑/手机等读取录音文件
- 发射器长达15小时的超长续航（板载录音功能开启后约为7.5小时）
- 配套充电盒，便于出行携带

产品结构

发射器 (Blink M2 TX)

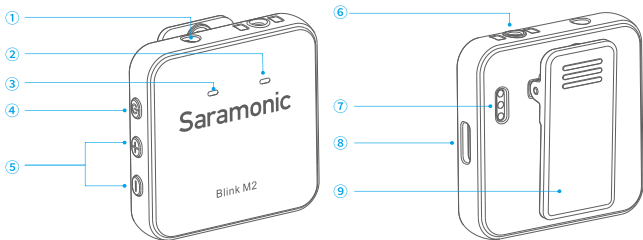

- ① 3.5mm TRS输入孔
用于连接随附的领夹麦或其他3.5mm麦克风。

② 录音指示灯

状态	指示灯
静音模式开启	红灯闪烁
板载录音开启	红灯常亮

③ 状态指示灯

状态	指示灯
未联机	蓝灯慢闪
对码中	蓝灯快闪
联机成功	蓝灯常亮
最大/最小增益	蓝灯闪烁3次
降噪开启	绿灯常亮
低电量	红灯闪烁
充电中	红灯常亮
充满电	红灯熄灭

注意: 发射器处于低电量时请及时充电, 否则发射器将在10分钟内自动关机。

④ 电源键

- 长按2秒开/关机。
- 短按开启/关闭静音模式。
- 关机状态下长按5秒进入对码状态。

⑤ +/-键

- 短按“+”/“-”键可在0~6级范围内调节麦克风增益(参数设定在电源关闭后仍保留)。
- 同时按下“+”键和“-”键可开启/关闭降噪功能(参数设定在电源关闭后仍保留)。
- 长按“-”键3秒开启/关闭板载录音功能。

⑥ 内置麦克风


⑦ 充电触点

⑧ Type-C数据接口

用于充电,也可用于连接至电脑或手机读取录音文件。

⑨ 背夹

接收器 (Blink M2 RX)

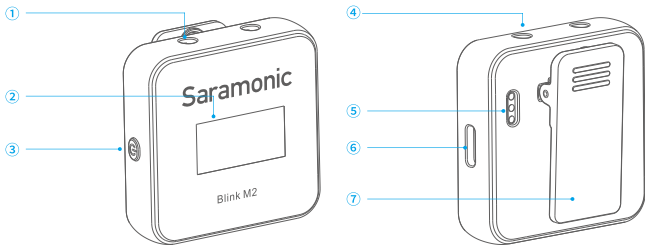

① 3.5mm TRS耳机孔

接入耳机可实时监听音频。


② TFT-LCD显示屏

③ 电源键

长按2秒开/关机; 复用为设置键, 可调整接收器菜单设置。

- ④ 3.5mm自适应输出孔 (TRS/TRRS)
输出模拟音频至相机、混音器、手机等设备。
- ⑤ 充电触点
- ⑥ Type-C充电口
- ⑦ 背夹


充电盒 (Blink M2 CC)

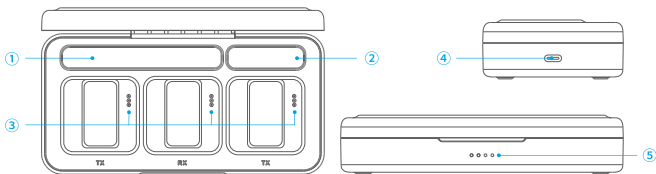

- ① 配线凹槽
- ② 防风毛套凹槽
- ③ 充电触点
- ④ Type-C充电口
- ⑤ 电量指示灯

状态	指示灯
低电量显示	● ○ ○ ○
充电中	● ● ● ●
充满电	● ● ● ●
当前电量75%	● ● ● ○

USB-C接收器 (Blink M2 RXUC)

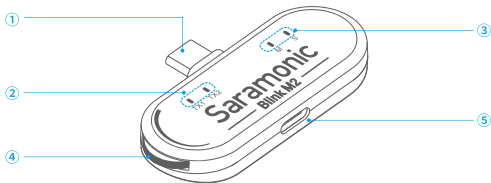

① USB-C接头

可连接至安卓手机、平板、电脑或其他带USB-C接口的设备。

② LED指示灯

用于指示发射器TX1/ TX2的状态。

指示灯	状态
蓝灯闪烁	对码中
蓝灯常亮	对码成功
红灯常亮	静音
蓝灯快闪两次	最大/最小音量
红灯快闪	低电量

③ 输出模式指示灯

当处于单声道模式时，M指示灯亮蓝灯；当处于立体声模式时，S指示灯亮蓝灯；当处于安全音轨模式时，M与S指示灯均亮蓝灯。

④ 音量滚轮

- 向上/向下滚动可在1~6级范围内调节输出音量；
- 双击将接收器静音/取消静音；
- 连续按3次进入配对状态；
- 短按可切换单声道(M)/立体声(S)模式；
- 长按3秒可开启/关闭外放功能。


⑤ USB-C充电接口

当Blink M2 RXUC接收器插入外接设备时，可通过此充电端口为外接设备充电。此接口连接随附的音频线后，可实现边监听边为设备充电。

- 💡1. 此充电口支持给大部分Type-C设备充电。电源额定输入与输出均为5V/2A。
- 2. 此接口不支持直接插入Type-C耳机监听。
- 3. 录音中途若外接充电线，音频将中断。

接收器屏幕操作

主界面预览

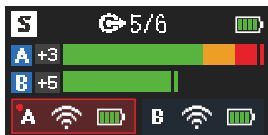

	接收器处于单声道/立体声/安全音轨模式
	显示接收器输出音量, 范围为0~6, 默认设定为5档
	表示A/B通道已连接
	显示当前音频输入电平(当右侧实时音量条显示橙色/红色爆音提示时应调小发射器增益)
	静音模式
	界面右上角表示接收器电量, 界面底部两边分别表示A/B通道对应的发射器电量
	当前发射器与接收器之间的无线信号强度
	表示A通道已连接, 且对应发射器已开启板载录音功能
	表示B通道已连接

菜单介绍

- 在主界面，短按接收器电源键可进入菜单，继续短按可切换不同设置，直到退回至主界面。
- 在菜单页，长按接收器电源键进入选项→短按调整各参数值或功能→再次长按保存设定。
- 如果超过20秒不操作，显示屏将自动跳转回主界面。

主菜单	子菜单	说明
输出音量	0~6	若声音过爆，优先调小接收器输出音量，参数设定在电源关闭后仍保留（默认设定为5档）
输出模式	单声道	左右声道输出的内容一致
	立体声	左右声道输出分别对应发射器A和B两个声源
	安全音轨	右声道的输出增益比左声道小12dB，以防声音过爆
TX静音开关	开启	启用发射器的静音功能
	关闭	禁用发射器的静音功能，防止误触
自动录音	开启	发射器开机自启动板载录音功能
	关闭	发射器开机时板载录音功能默认关闭
背光时间	常亮	屏幕背光总是亮起（默认设定）
	10秒	屏幕背光将在未进行操作10秒后熄灭
	30秒	屏幕背光将在未进行操作30秒后熄灭
	60秒	屏幕背光将在未进行操作60秒后熄灭
TX时间设置	进入	设置日期和时间可以让所有录音文件在导出时都包含时间戳。 当发射器与接收器联机成功后，即可设置TX系统时间。（注意：若只连接一台发射器就设置时间，可能会出现两台发射器时间不同步的情况。）
语言设置	简体中文	默认设置为“English”
	English	
恢复出厂设置	是？	恢复出厂设置后，接收器的相关参数将被恢复到默认出厂值。（请谨慎使用此功能）
	否？	

对码	是?	选择“是”，接收器进入对码状态
	否?	
版本号		显示接收器的软件版本号

如何使用


发射器

1. 使用内置麦克风时，在户外录音或有风的环境下，为保持录音清晰的效果，建议将防风毛套安装到发射器上。使用随附的有线领夹麦时，需连接至发射器的3.5mm TRS音频输入孔。
2. 若录音环境嘈杂，还可以同时按发射器“+”“-”键开启降噪模式，提高录制效果。



搭配Blink M2 RX接收器使用

1. 使用适配音频线将相机、手机、或电脑等设备连接至接收器的3.5mm自适应音频输出孔。
- ⚠️当您使用的相机为SONY ZV-1、ZV-1 II、ILCE-7C、FUJIFILM X-S10机型时，请搭配随附的相机转接架一起使用。

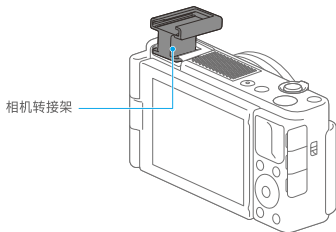

2. 长按电源键2秒，将发射器、接收器开机。

3. 发射器和接收器出厂前已配对成功。若其断开连接，请按如下步骤进行配对：

- ① 关机状态下，长按发射器电源键5秒，使其进入配对状态，其状态指示灯呈蓝灯快闪；
- ② 进入接收器菜单，找到“对码”页面，选择“是？”，使其进入配对状态。



- ③ 发射器和接收器将在10秒内完成配对。配对成功后，发射器状态指示灯变为蓝灯常亮。
4. 根据需求，可将您的耳机连接至接收器的3.5mm耳机孔进行音频监听。
5. 根据需求，可在接收器软件菜单里设置单声道/立体声/安全音轨模式。
6. 建议在正式录音前做个简短的录音测试，检查音频水平是否可以接受。

搭配Blink M2 RXUC接收器使用

1. 将Blink M2 RXUC接收器插入带USB-C接口的手机、平板、电脑等移动设备。
2. 请按如下步骤进行配对：
 - ① 在发射器关机状态下，长按其电源键5秒使之进入配对状态，其状态指示灯呈蓝灯快闪。
 - ② 将接收器一侧的音量滚轮连续按3次，使其进入配对状态，其TX1 (TX2) 指示灯呈蓝灯闪烁。
 - ③ 发射器和接收器将在10秒内完成配对。配对成功后，其上述指示灯均变为蓝灯常亮。
3. 根据需求，可将您的耳机通过随附的双头音频线连接至接收器进行音频监听。
4. 根据需求，短按接收器音量滚轮可设置音频输出模式为单声道/立体声。
5. 建议在正式录音前做个简短的录音测试，检查音频水平是否可以接受。

- 💡 1. 单个发射器每次只能与其中一种接收器配对使用。
- 2. 当两个发射器都要与接收器进行配对时，请优先设置发射器配对，最后设置接收器配对。
- 3. 由于在2.4GHz频谱下，信号很容易受干扰，请尽量避免开墙壁和建筑物等障碍物，避免接近2.4GHz频率的设备，如大功率Wi-Fi天线、收音机等。
- 4. 录制结束后，可将发射器放入充电盒中进行充电。

外放功能

Blink M2 RXUC接收器接入手机后，默认开启外放功能，即可以在不拔掉接收器的情况下直接外放手机音频。若需要关闭此功能，请移至Saramonic APP。

- 💡 1. 当Saramonic APP开启/关闭外放功能时，接收器将与发射器断开连接。
- 2. 外放功能开启时，接收器无法通过外接的音频线进行监听音频。建议您在监听前，关闭此功能。
- 3. 外放功能开启时，在手机通话状态下可能会产生啸叫现象，或在部分第三方软件中存在重音现象或兼容性问题。如有上述情况，请关闭此功能。

板载录音

- 长按发射器的“-”键3秒即可开启板载录音功能；也可提前在接收器菜单中设置板载录音在发射器开机时自启动。
- 在48kHz/24bit采样率下，最高支持板载录音时长约为15小时。
- 录音满30分钟后将自动分割文件，便于快速查找想要的录音片段。
- 录音文件默认命名格式为“年-月-日-时-分-秒.WAV”，最高支持999个录音文件。
- 内置SD卡可保存约8GB的音频文件，内存录满后将自动循环覆盖。

- 💡 注：1. 开启静音模式并不会影响板载录音功能。
- 2. 首次使用时，请根据当前日期和时间校准发射器时间戳。

故障排除

在使用本机的过程中出现任何问题，请参照以下内容加以解决。如果此手册仍然无法解决您遇到的问题，请与我们当地的经销商售后服务部联系。

• 产品无法进入对码状态

- ① 在确保发射器处于关机状态下，长按电源键直至发射器状态指示灯变为蓝光快闪时再松开，否则无法进入对码状态。
- ② 当发射器连接电脑读取录音时，进入U盘模式，此时无法与接收器进行对码。

• 产品无声音

- ① 检查产品是否已联机成功，若未联机则需要先手动对码。
- ② 检查发射器是否处于静音模式，短按其电源键即可解除静音。
- ③ 检查增益、音量是否被调至最低，将其调至合适的档位。

• 发射器连接电脑时无法读取板载录音文件

确保板载录音功能已关闭。在板载录音功能关闭后再连接电脑方可读取板载录音文件。

• 无法设置发射器时间

- ① 请确保两台发射器均已成功连接到接收器，且其板载录音功能均已关闭。
- ② 请确保日期与时间的格式填写正确。

• 产品的使用距离受限且出现变音噪音

- ① 一般由环境干扰导致，当前使用环境如果有工作中的大功率无线路由器或无线设备，建议更换使用场景，若无法避免则需要找到合适的距离或角度。
- ② 由于在2.4GHz频谱下，信号很容易受干扰，请尽量避开墙壁和建筑物等障碍物，避免接近2.4GHz频率的设备，如大功率Wi-Fi天线、收音机等。
- ③ 检查产品是否连接正常，线材是否有松动。

• 使用Blink M2 RXUC接收器时无法进行回放监听

检查接收器是否开启了手机外放功能。外放功能开启时无法通过接收器进行回放监听。

• 使用Blink M2 RXUC接收器时有啸叫声

检查接收器是否开启了手机外放功能。外放功能开启时可能会产生啸叫现象。

• 充电盒无法给产品充电

- ① 首先建议为充电盒充电，排除因充电盒电量过低引起。
- ② 用干净的布擦拭产品和充电盒的触点，避免由灰尘引起的接触不良。
- ③ 若充电盒磁力老化，无法吸附住产品，请联系售后协助处理。

参数

Blink M2 TX发射器

传输方式	2.4GHz数字频段
信号调制	GFSK
极性模式	全向型
天线类型	PIFA
操作距离	250米(在无阻碍无干扰空旷环境测得)
射频输出功率	< 10dBm
失真	≤ 0.1%
频率响应	20Hz-20kHz
参考音频输入电平	-30~-42dBV(MIC输入, 0dB增益)
采样率	48kHz
位深度	24bit
信噪比	> 90dB
音频输入	内置麦克风/ 3.5mm TRS输入孔
内存大小	8GB
最高存储录音时长	约15小时
录音格式	WAV
电池容量	280mAh
供电方式	内置锂电池供电/ 充电盒触点充电/ Type-C接口(5V/1A)
工作时长	约15小时(板载录音功能开启后约7.5小时)
充电时长	约2小时
重量	24g
尺寸	43.6x43.6x12.5 mm
工作温度	0°C ~ +50°C
贮存温度	-10°C ~+ 50°C

Blink M2 RX接收器

传输方式	2.4GHz数字频段
信号调制	GFSK
极性模式	全向型
天线类型	PIFA
操作距离	250米(在无阻碍无干扰空旷环境测得)
射频输出功率	< 10dBm
失真	≤ 0.1%
频率响应	20Hz-20kHz
参考音频输入电平	-30~-42dBV(MIC输入, 0dB增益)
采样率	48kHz
位深度	24bit
信噪比	> 90dB
音频输出	3.5mm自适应输出孔(TRS/TRRS) 3.5mm TRS耳机孔
电池容量	300mAh
供电方式	内置锂电池供电/ 充电盒触点充电/ Type-C充电口(5V/1A)
工作时长	约12小时
充电时长	约2小时
重量	27.5g
尺寸	43.6x43.6x15.8 mm
工作温度	0°C ~ +50°C
贮存温度	-10°C ~+ 50°C

Blink M2 CC充电盒

内置锂电池标称电压/容量	3.7V/ 1800mAh
充电时长	约3小时
充电接口	USB-C接口
可供循环充电次数	1.2次 (2*TX+1*RX)
重量	180.5g
尺寸	163×81×33 mm
工作温度	0°C ~ +50°C
贮存温度	-10°C ~+ 50°C

Blink M2 RXUC接收器

传输方式	2.4GHz数字频段
信号调制	GFSK
天线类型	PIFA
操作距离	100米 (无障碍)
频率响应	20Hz-20kHz
音频输出	USB-C数字输出
供电方式	外接设备供电
重量	11.3g
尺寸	57.45mm×22.88mm×8mm
工作温度	0°C ~ +50°C
贮存温度	-10°C ~+ 50°C

包装清单

- 2× Blink M2 TX发射器
- 1× Blink M2 RX接收器
- 1× Blink M2 RXUC接收器
- 1× Blink M2 CC充电盒
- 1× 3.5mm TRRS转TRRS音频线
- 1× USB-C公头转3.5mm TRS & USB-C母头音频线
- 1× USB-A转Type-C数据线
- 2× 内置麦克风防风毛套
- 1× 相机转接架
- 2× 领夹麦克风
- 1× 收纳盒



For better recording experience, the application Saramonic is recommended.

为获得更好的录制体验, 推荐使用枫笛 Saramonic 自主研发应用软件 Saramonic。



Scan the QR code and follow us!

扫描微信二维码关注枫笛公众号!

Shenzhen Jiayz Photo Industrial, Ltd

深圳市长丰影像器材有限公司

A16 Building, Intelligent Terminal Industrial Park of Silicon Valley

Power, Guanlan, Longhua District, Shenzhen, China

深圳市龙华区观澜街道大富工业区硅谷动力智能终端产业园A16栋